




www.vax.co.uk

Vax Careline:
0870 6061248

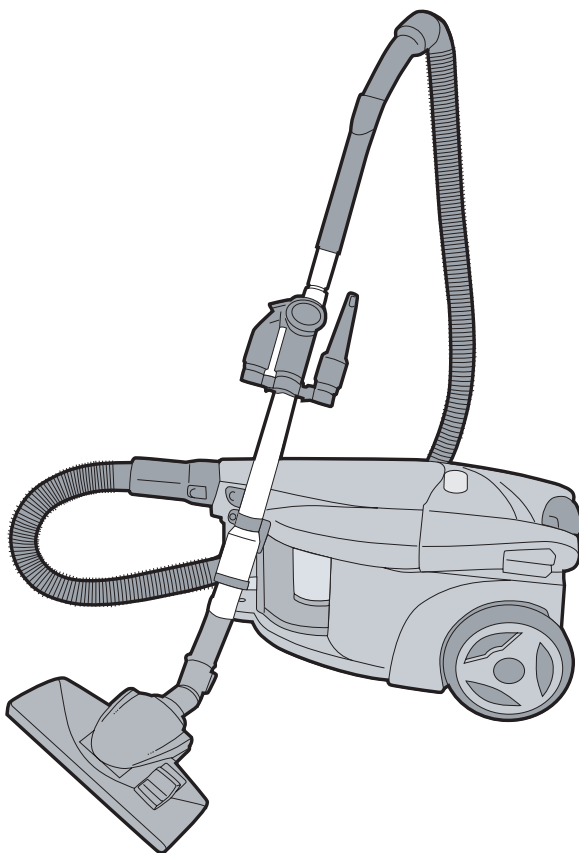

BAGLESS VACUUM CLEANER

Vax Model Number: V-092/V-092TT/V-092TB

Please read carefully before using
this cleaner. Always fully extend
the mains cable before use.

Instruction Manual

Parts Overview

1. Diagram

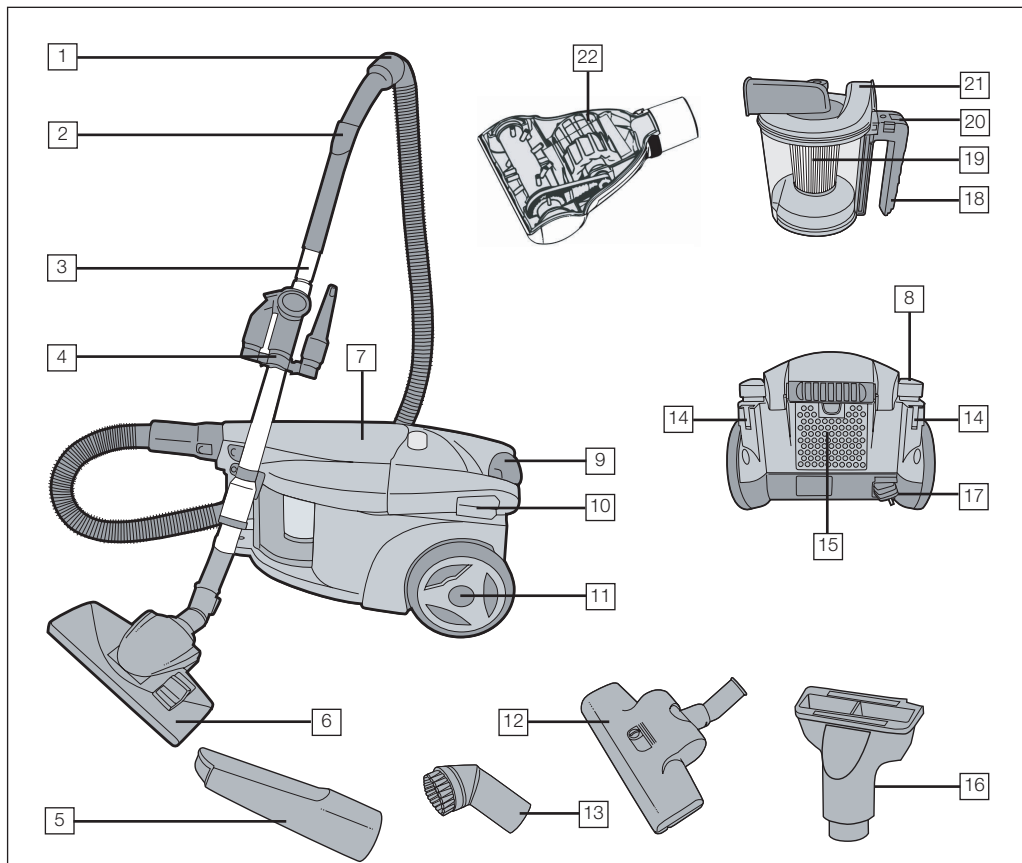


Fig.1/1

- | | |
|------------------------------|--------------------------------|
| 1 Handle | 14 Floor tool parking |
| 2 Suction regulator | 15 Post-motor filter cover |
| 3 Telescopic extension tube | 16 Upholstery tool |
| 4 On-board tool holder | 17 Plug |
| 5 Crevice tool | 18 Dirt container carry handle |
| 6 Combination floor tool | 19 HEPA filter |
| 7 Top cover | 20 Dirt release button |
| 8 Cord rewind button | 21 Dirt container |
| 9 Carry handle | 22 TurboTool® (V-092TT only) |
| 10 On/off button | |
| 11 Wheels | |
| 12 TurboBrush (V-092TB only) | |
| 13 Dusting brush | |

2. Safety Information

FOR HOUSEHOLD USE ONLY.

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Only use the vacuum cleaner indoors on dry surfaces.
2. Turn off the vacuum cleaner controls before connecting to or disconnecting from the mains supply.
3. Always unplug the vacuum cleaner before connecting or disconnecting the vacuum hose.
4. Close attention is necessary when used by or near children. Do not allow children to use as a toy.
5. Use only as described in this manual. Use only the manufacturer's recommended attachments.
6. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors or dropped into water. Do not use the vacuum cleaner with a damaged cord or plug. If the supply cord or plug is damaged, return the vacuum cleaner to a Vax Authorised Service Agent or suitably qualified person for examination, repair or adjustment.
7. Do not pull or carry by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.
8. Do not handle the plug or vacuum cleaner with wet hands. Do not use outdoors or on wet surfaces.
9. Do not put any objects into openings. Do not use with any openings blocked and do not restrict air flow. Keep all openings free of dust, lint, hair or anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
11. Do not pick up hot coals, cigarette butts, matches or any hot, smoking or burning objects.
12. Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapours.
13. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
14. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
15. Do not use without the filters in place.
16. Use extra care when vacuuming on stairs.
17. Keep vacuuming area well lit.
18. Store the vacuum cleaner indoors in a cool, dry area.

19. Turn off the switch before unplugging.
20. Use only CE-approved 13 amp extension cords. Non-approved extension cords may overheat. Care should be taken to arrange the cord so that the cord cannot be pulled or tripped over.

WARNING: Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dirt container, or before connecting/disconnecting the attachments.

CAUTION: The vacuum cleaner is a very powerful unit. Before plugging the cord into the outlet make sure the switch is in the 'off' position. Hold the vacuum cleaner firmly when starting and in use.

IMPORTANT: If the inlet or hose is blocked, switch off the vacuum cleaner and remove the blockage(s) before re-starting the vacuum cleaner.

IMPORTANT: Cleaning filters improves vacuum performance. Make sure all filters are replaced back into the vacuum cleaner before using.

This vacuum cleaner is intended for household use only and not for commercial or industrial use.

PLEASE KEEP THESE INSTRUCTIONS FOR FURTHER USE.

Motor Thermostat

IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason, the vacuum cleaner should over-heat, the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner from the electrical outlet and turn off the switch. Remove the dirt container and empty. Clean the filters. Allow the cleaner to cool for approximately one (1) hour.

To re-start, plug into an electrical outlet and switch back on.

3. How to Assemble

IMPORTANT: Always remove the power plug from the electrical outlet before assembling or before removing accessories.

1. Insert the flexible hose into the inlet on the main body of the vacuum cleaner. Push in until it clicks into position (Fig.3/1).

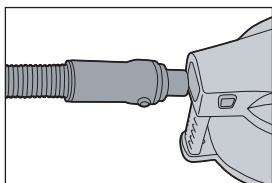


Fig.3/1

2. Push the telescopic extension tube onto the end of the handle (Fig.3/2).

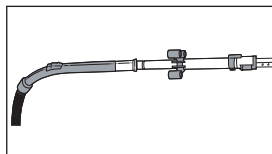


Fig.3/2

3. The telescopic extension tubes can be lengthened or shortened by pushing the button in and sliding the tubes apart or together as required (Fig.3/3).

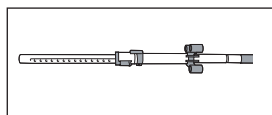


Fig.3/3

4. Fit the combination floor tool by pushing onto the telescopic extension tube (Fig.3/4). Fit the TurboBrush by pushing onto the extension tube (V-092TB only) (Fig.3/4).

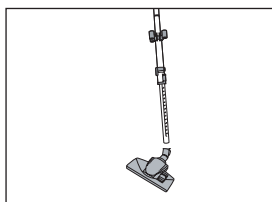


Fig.3/4

5. Attach the tools into the on-board tool holder by pushing into position (Fig.3/5).

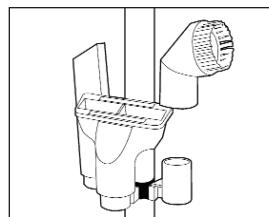


Fig.3/5

4. How to Operate

Cord Release

Fully unwind the power cord. A yellow mark on the power cord indicates the recommended cord length. Do not exceed the cord length beyond the red mark.

On/off Button

Plug the cord into the electrical outlet. Turn the vacuum cleaner on by depressing the button located on the top right side of the vacuum cleaner (Fig.4/1). The vacuum cleaner can be turned off by pressing the on/off button again.

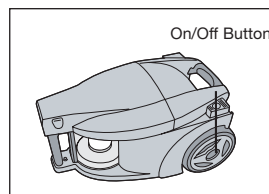


Fig.4/1

Carpet Vacuuming

For carpet and rug cleaning, press the rocker switch on the combination floor tool to raise the brushes (Fig.4/2).

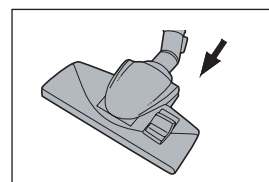


Fig.4/2

Hard Floor Cleaning

For hard floor cleaning, press the rocker switch on the combination floor tool to lower the brushes (Fig.4/3).

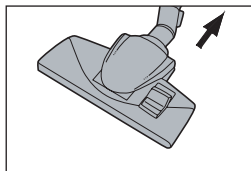


Fig.4/3

Cord Rewind

After use, turn the vacuum cleaner off and unplug from the electrical outlet. Press the button for the cord rewind to draw the power cord automatically (Fig.4/4).

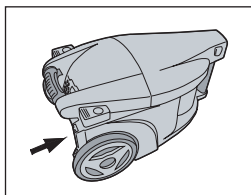


Fig.4/4

Carry Handle

Use the carry handle located on the top or front of the vacuum cleaner to move from room to room (Fig.4/5).

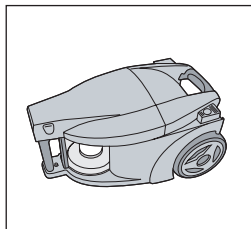


Fig.4/5

Storage

1. For convenience there are two (2) slots located at the back of the vacuum cleaner where the floor tool and hose can be parked for carrying and storage.
2. For storage, the vacuum cleaner can be stood in an upright position. Another slot is located on the underside of the cleaner to park the floor tool and hose using the hook on the on-board tool storage.

5. Accessories

The on-board tool storage means accessories are always at hand when needed.

1. The accessories can be attached directly to the handle by removing the telescopic tubes and pushing in the desired accessory (Fig.5/1).

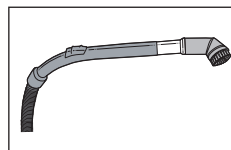


Fig.5/1

2. The accessories can also be attached to the telescopic extension tube for extra reach. Remove the combination floor tool and push on the desired accessory (Fig.5/2).

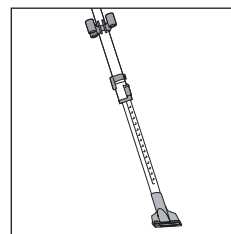


Fig.5/2

Crevice Tool: For crevices, corners, cracks etc.

Dusting Brush: For delicate surfaces.

Upholstery Tool: For carpet, upholstery, stairs etc.

TurboTool® (V-092TT only) : For pet, hair, upholstery and stair cleaning.

1. The TurboTool® fits on the end of the telescopic tube and/or hose grip.
2. Perfect for cleaning stairs and upholstery.
3. The TurboTool® should be pulled backwards for optimum cleaning.

TurboBrush (V-092TB only) : For pet, hair and larger carpeted areas.

The TurboBrush fits onto the end of the telescopic tube.

NOTE: Perfect for cleaning large carpeted areas; not recommended for hard floors.

6. Dirt Container & Filter: Removal & Replacement

IMPORTANT: Always unplug the vacuum cleaner from the electrical outlet before removing the dirt container.

IMPORTANT: Do NOT use the vacuum cleaner without ALL of the filters in place.

1. Remove the hose by pressing the two buttons on the side of the hose connector and pull away from the machine (Fig.6/1).

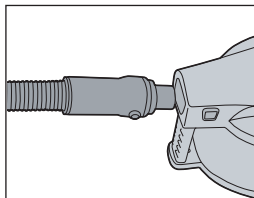


Fig.6/1

2. Lift up the top cover by pressing the two buttons either side of the machine to reveal the dirt container (Fig.6/2).

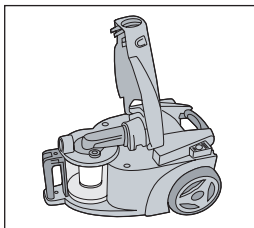


Fig.6/2

3. Lift out the dirt container from the main unit of the vacuum cleaner using the dirt container handle (Fig.6/3).

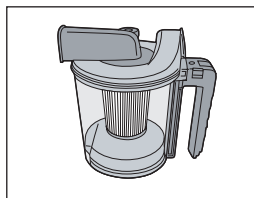


Fig.6/3

4. Push the dirt container release button (Fig.6/4) to empty the dirt into a rubbish bin. When all of the dirt has fallen, close the flap until it clicks shut.

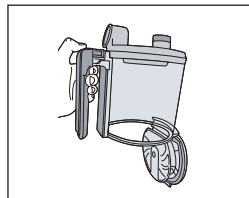


Fig.6/4

5. Lift out the HEPA filter from the dirt container (Fig.6/5).

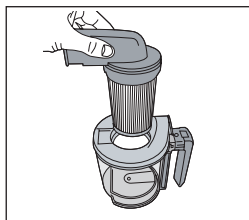


Fig.6/5

6. Gently tap the filter against the side of a rubbish bin or use a small brush to remove excess dirt and replace back into the dirt container. It is recommended the filter is cleaned after each emptying.

NOTE: The filter may also be washed by running it under the tap in lukewarm (Max 40°C) water. Vax recommend washing the filter once a month or when suction appears reduced. Always allow the filter to air dry for 24 hours before replacing into the cleaner. The white central filter may discolour over time, this is normal and will not affect the performance of the vacuum cleaner.

7. Place the dirt container back into the vacuum cleaner body and push down the top cover of the vacuum until it clicks into position (Fig.6/6).

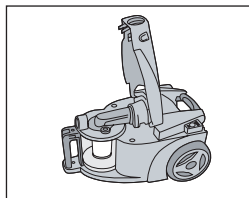


Fig.6/6

Post-motor Filter

Located at the rear of the vacuum cleaner is a post-motor filter which can also be removed and replaced.

1. Push down on the latch to release the post-motor filter cover (Fig.6/7)

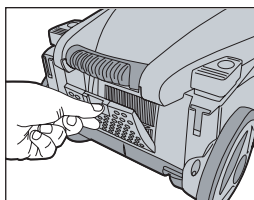


Fig.6/7

2. Remove the post-motor filter (Fig.6/8). Vax recommend replacing the filter every 6-12 months.

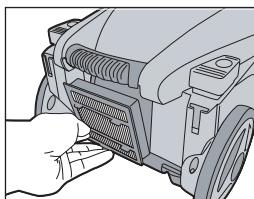


Fig.6/8

Removing debris from the TurboTool® (V-092TT only)

Switch the vacuum cleaner off and disconnect the power plug from the electrical outlet.

1. Rotate the locking ring 180° (Fig.7/2).

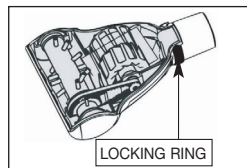


Fig.7/2

2. Lift the top cover off and remove any blockage (Fig.7/3).

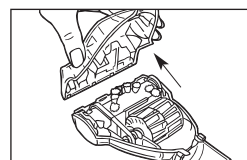


Fig.7/3

3. To re-assemble, ensure that the tabs are engaged. Pivot the lower housing closed and rotate the locking ring 180° (Fig.7/4).

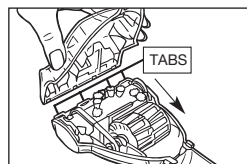


Fig.7/4

7. Clearing Blockages

1. Switch the vacuum cleaner off and disconnect the power plug from the electrical outlet.
2. The flexible hose can be disconnected from the vacuum cleaner by pushing in the button on the hose and pulling away from the machine (Fig.7/1). Remove any blockages found then reconnect the hose securely.

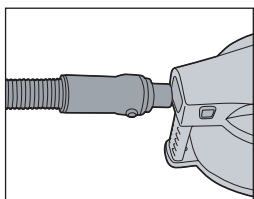


Fig.7/1

8. Troubleshooting

WARNING: TO REDUCE RISK OF PERSONAL INJURY, UNPLUG VACUUM CLEANER BEFORE SERVICING

PROBLEM: Cleaner won't run

Cause: Not properly plugged into electrical outlet.

Solution: Plug in firmly.

Cause: No electricity in electrical outlet.

Solution: Check fuse or breaker.

Cause: On/off switch not turned on.

Solution: Push on/off switch to on.

Cause: Motor thermostat has tripped.

Solution: Switch off and unplug cleaner. Leave for one (1) hour before switching the cleaner back on.

Cause: Blown fuse/tripped breaker.

Solution: Reset circuit breaker or replace fuse.

PROBLEM: Cleaner won't pick up/loss of suction

Cause: Dirt container not installed correctly.

Solution: Review dirt container removal and replacement.

Cause: Dirt container full or blocked.

Solution: Empty dirt container.

Cause: Clogged filter.

Solution: Remove filter and clean.

PROBLEM: Accessories won't pick up

Cause: Accessories not attached correctly.

Solution: Refer to page 5 for fitting information.

PROBLEM: Dust escaping from the vacuum cleaner

Cause: Dirt container full.

Solution: Empty dirt container.

Cause: Dirt container not installed correctly.

Solution: Review dirt container removal and replacement.

Cause: Hose not installed correctly.

Solution: Review hose installation.

Cause: Filter not installed completely.

Solution: Review filter removal and replacement..

9. UK Service & Help

Vax Care 0870 6061248

Monday-Friday 9.00am to 5.00pm.

An answerphone is available out of these hours. Any queries or concerns about using the Vax, call the Vax Careline. Calls are charged at the UK national rate.

Please make a note of the serial number and model number of the carpet cleaner before calling. There are over 400 approved Vax Service Agents in the UK. For the nearest Service Agent, please call the Vax Careline.

www.vax.co.uk

10. Technical Specification

Voltage:	220-240V ~50Hz
Wattage:	1800-2000W (dependent on model)
Capacity:	1.8 litres max
Filters:	Mesh pre-motor filter Foam & pleated paper cartridge Post-motor filter Pleated paper HEPA filter
Cord length:	7m
Weight:	7.2kg

Subject to technical change without notice.



This page has been left intentionally blank.

This page has been left intentionally blank.

EEC STATEMENT OF COMPLIANCE

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility declare that the products V-092/V-092TT/V-092TB is manufactured in compliance with the following:

Safety: 73/23/EEC Low Voltage Directive, as modified by 93/68/EEC

EMC: 89/336/EEC Electromagnetic Compatibility Directive, as modified by 93/68/EEC



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK

email: info@vax.co.uk - website: www.vax.co.uk

Version 1